

1803.80

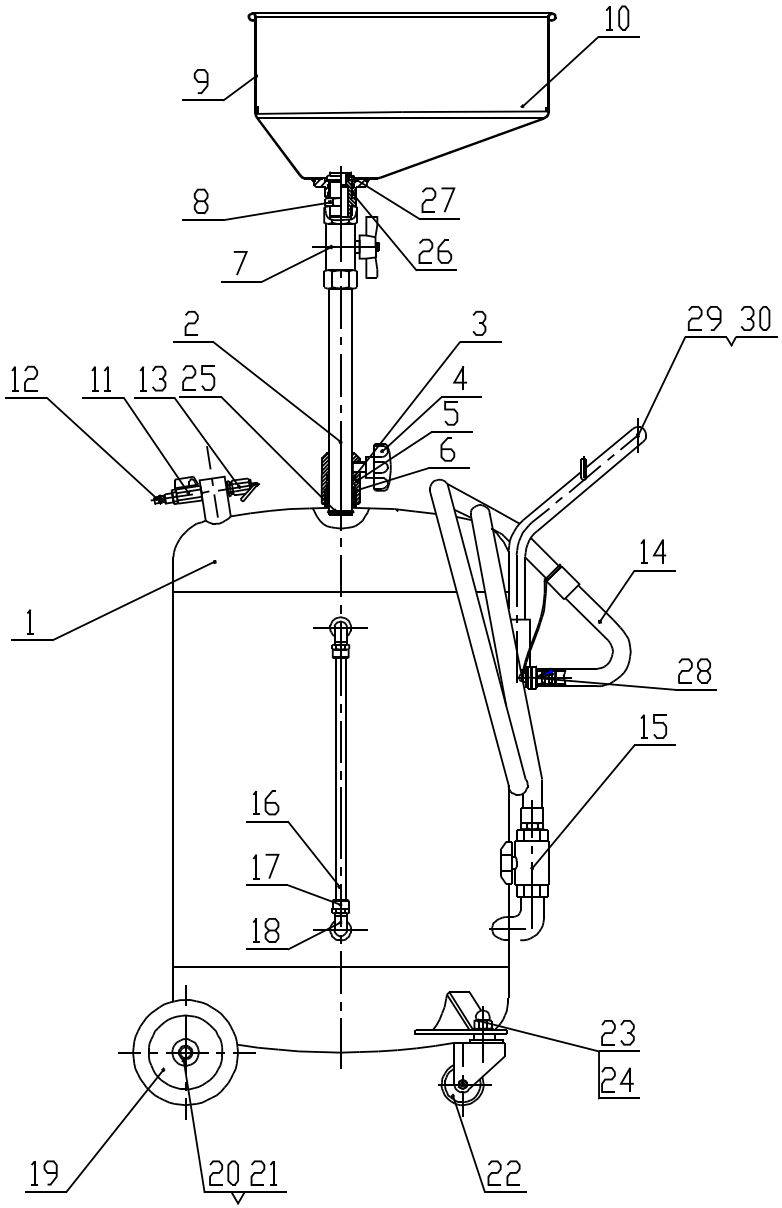

AIR-OPERATED WASTE OIL DRAIN MANUAL

■ 1803.80

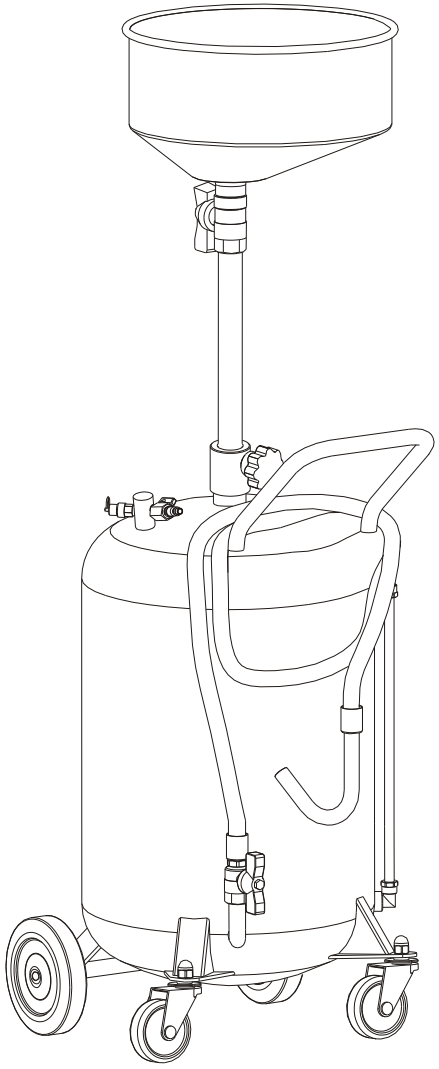


⚠ WARNING

- For waste oil use only.
- Do not expose the reservoir to any source of heat.
- While extracting high temperature oils, keep hands and face protected.
- Only use the device for the purpose for which it has been designed.
- Do not modify any component of the equipment.
- Only use original spare parts.
- Contract American lubrication if you need any additional information.


ASSEMBLY

Fig.1: The handle B weld on the tank.
Fig.2: Attach ball valve C to the drain basin and tighten it with a suitable wrench.
Fig.3: Connect the assembled group, the reservoir tank, by tightening ring nut D using a suitable wrench and screw with handwheel E.
Fig.4: Attach the hose with the ball valve and adapter F on the base of the units tank.

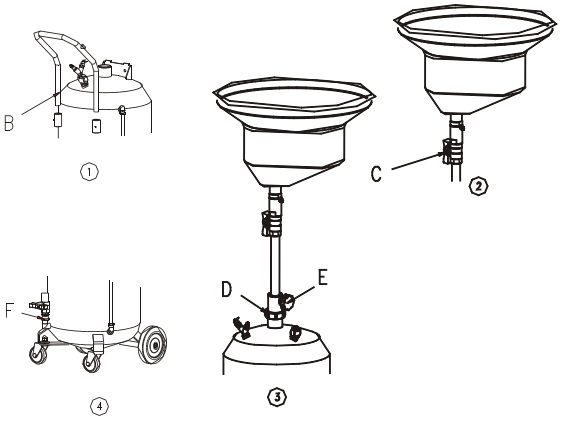


OPERATION

Fig.5: To raise and lower the catch basin loosen knob E, move the basin to the Desired height and re-tighten knob E.

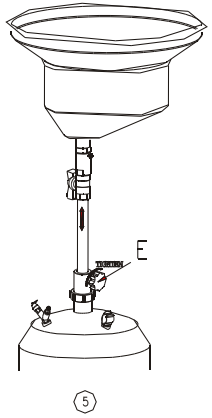

CAUTION

Never fill the reservoir over the maximum level indicated by the gauge that is located on the side of the reservoir.
EMPTYING IMPORTANT!
Fig.6: Make sure that valve C is closed.
Make sure that screw E is tightened.
Attach the end of the drain hose to a suitable waste oil container.
Open ball valve G.
Connect compressed air (7Psi/0.5Bar) to quick couple M.
After the fluids have been transferred from the unit's reservoir tank close ball valve G.
The unit is equipped with a safety valve that has been factory calibrated at 1 bar (14 PSI).

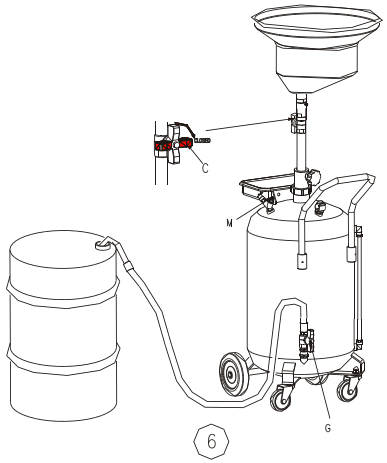

PART LIST

No.	Description	Quantity	No.	Description	Quantity
1	Reservoir	1	16	Tube with label	1
2	Adjusting steel tube	1	17	Elbow fitting	2
3	O-ring	2	18	Nut	2
4	Handwheel	1	19	Wheel	2
5	Seat	1	20	Screw	2
6	O-ring	1	21	Washer	2
7	Ball valve	1	22	Swivelling wheel	2
8	Steel tube	1	23	Washer	2
9	Funnel	1	24	Acorn nut	2
10	Filter plate	1	25	Spring block	1
11	Ball valve	1	26	O-ring	2
12	Quick plug	1	27	Nut	1
13	Safety valve	1	28	Stuff assembly	1
14	Discharging hose	1	29	Handle	1
15	Ball valve	1	30	Screw	2